


1. The unit includes electronic devices and solenoid valve, please do not knock. 2. Caution for connecting line/hen disassembling the unit. 3. Please wipe it using soft cloth/th neutral detergent/hen cleaning the product. Nextwipe detergent and dirt by thewrung-out soft cloth, then using dried soft cloth to dry.

4. Please do not washing with watering or using some detergent with particle such as scouringpowder and laundry detergent, also do not using diluent, detergentvth high acid or Nylon brush to clean this product, lest to damage surface or erode internal electronic components, especially be careful not to damage transparent covewhich placed induction window to avoid decrease the effectiveness of reaction. Tips: Ensure the distance between sensing window and countertop is above 35cm When installing on stainless steel countertop. Installation

How to Use

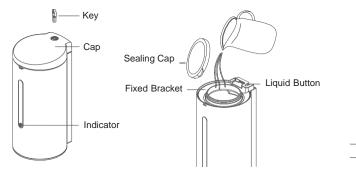

3. Put your hand under the sensor

until the liquid sprayed out

1. Insert the key into the lock to open 2. Open the sealing cap and pour the the top cover after install the battery Long press the setting button for about 3 seconds, then the LED light on with flashing 3 times

liquid soap, remove the extra over flowing, and recover it.

WARNING

Children should be used under adult supervision to prevent accidentally eating! Please don't throw away discarded batteries, recycling used batteries by correct way! The unit has been designed with microcomputers & electronic circuit etc. Do not splash water.



- After installing the batteries, long press the setting button for about 3 seconds, then the LED light on with a **fl**ashing, after 3 ti**m**es **fl**ashing will the unit stay in standby, long press the setting button to switch between turning the machine standby status and dormant status.
- The unit is suggested to install batteries even if you don't use it, so that the unit can automatically run once per 72 hours in the standby status to avoid the catheter pressure adhesion.
- Some of unit had installed batteries and in dormant status before delivery. Keep press setting buttons for more than 3 seconds, the indicator will flash 3 times turning into standby status. Whereas if the unit turn to dormant status after keeping press the setting button.

Liquid Adjustment

At the standby status, you can adjust liquid by pressing the liquid adjust ment button. The default liquid volume output is around 1.0ml before delivery, it will increase around 0.5ml output for per press. Totaly 5 levels adjustment with the range of liquid soap supply 0.5–2.5ml. Different liquid may have a slight deviation.



Troubleshooting


Proble m	Reason	Potential Solution	
LED indicator of	Control system trouble	Replace the controller	
	Power supply problem	Check the Circuits and batteries	
	Batteries poor contact or out of power	Re-install or replace the batteries	
	Circuits problem or poor contact	Check the Circuits	
	Block sight of indicator	Clean the indicato ^{window}	
LED light flas h	Not enough powe r	Replace the batteries	
Indicator on without liquid supply	Sensor continue working	Re m ove the sensing object	
	Out of sensing distance	Contact the the dealer	
	Unit fault	Contact the the dealer	
Insufficient liquid supply	Short liquid supply time	Adjust the liquid output	
	Too v iscous liquid	Reduce liquid v iscosity	
	Liquid coagulation or obstruction	Try some times or contact the dealer	
Tips: Please pre	vent debris from entering the containe	er to a v oid blocking.	

Specification


Volu m e	700ml	Sensing Distance	5–9cm
Di m ension	100 x 110 x 220mm	Liquid Supply	0.5ml~2.5ml (5 step adjustment
Net Weight	1 1kg	Ambient temperature	0-45°C
Power	DC9V(6 AA Batteries		




USER MANUAL

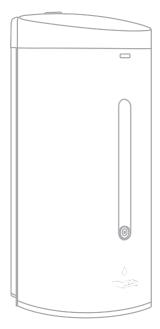

Introduction

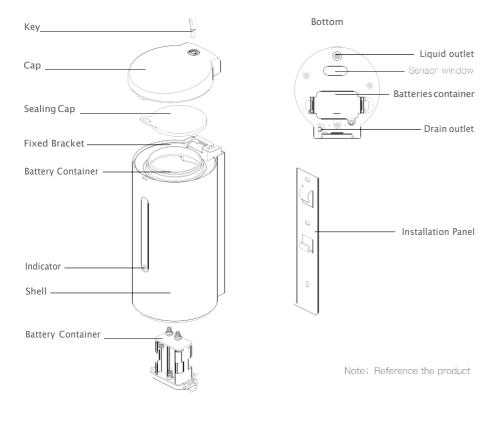

Dimension

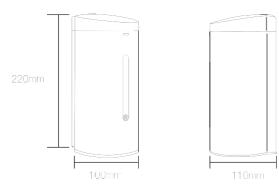



To make sure the unit dose work and extend its lifespan under the good condition, please notice that:

1. Please read user manual and instructions very carefully before installing the unit. 2.Please using the same AA battery (6 pcs) of well - known brand. Old and new batteries car not be mixed. If counterfeit or low-grade batteries are used, it may do harm to the unit lifetime.

3. Please check the wall is flat or not and clean the surface of wall before installing the unit. 4.Distance (more than 25cm) will be needed from the bottom of unit to tables or other objects.

5. The instructions of installing will be given to the user or manager by qualified person. 6.Reflective objects must not be put in the sensing distance under the unit.

7.Please do not cover with reflective objects (such as mirror or stainless steel) on the table against the bottom of the unit, to avoid wrongly placed.

8.Indoor use only, to avoid wrongly placed.

Packing list


UnitX1	Installation Panel X1	ST4X25 Screw X3	Installation Manual X1
Expansion Screw	X3 Certification	n X1 Key X1	

1. Please make sure if any items are missing or problems before installing, contact your dealer or manufacturer.

2.Specification of part items changed might be not informed in time, please contact your dealer or manufacturer when problems can not be solved during installing.


3. Main objects are sealed by special bag. Do not hit or drag too heavy when you move or open the bags.

Installation

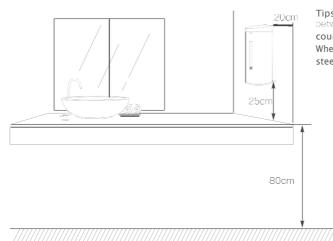


Tips: Ensure the distance between sensing window and counter top is above 35cm When installing on stainless steel counter top.

Floor

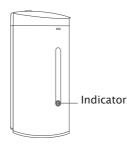


1. Keep the body straight up when the LED light is flashing

Installation

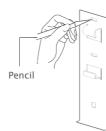



installation three holes.

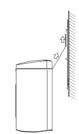

Battery Installing and Replacement

the mounting plate.

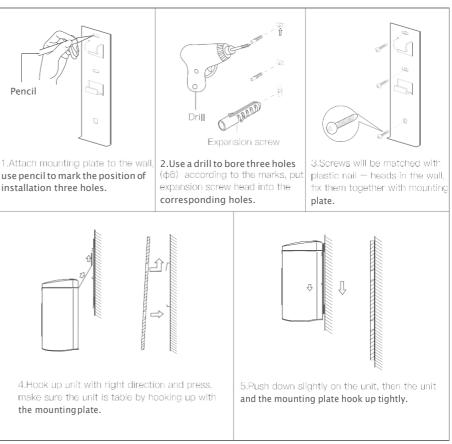

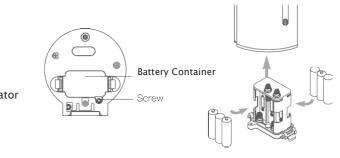

2. out the battery container

3. Put in or replace all standard batteries {DC 9V/AA batteries (6 Pcs)}. Put it back and tighten the screws.

Unscrew the screws and pick