
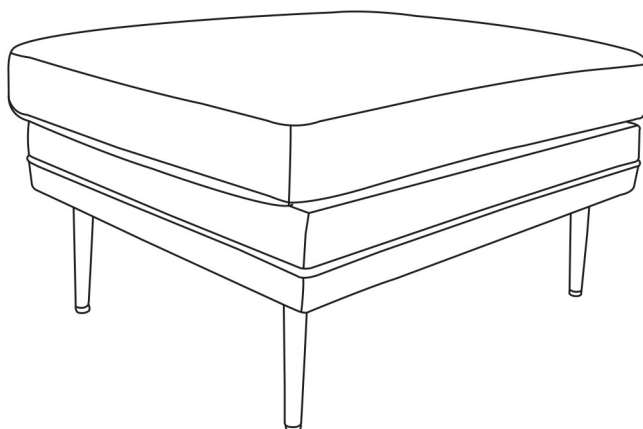


ASSEMBLY INSTRUCTION

BOOM-Ottoman: 15550-000, 15550-995, 15550-980, 15550-888, 15550-987, 15550-894, 15550-989

A*1 	B*1 	C*4 	D*16  m6*25mm	E*1 
---	--	--	--	--

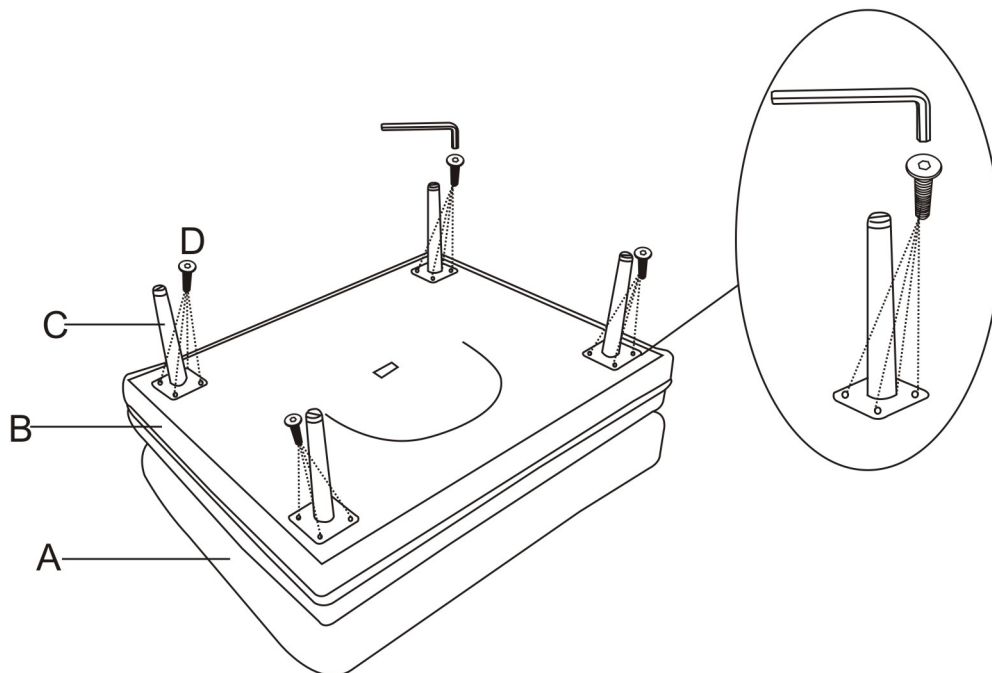

OBS legs and hardware are packed inside of the sofa! Open the zipper on the bottom of the sofa for the parts