






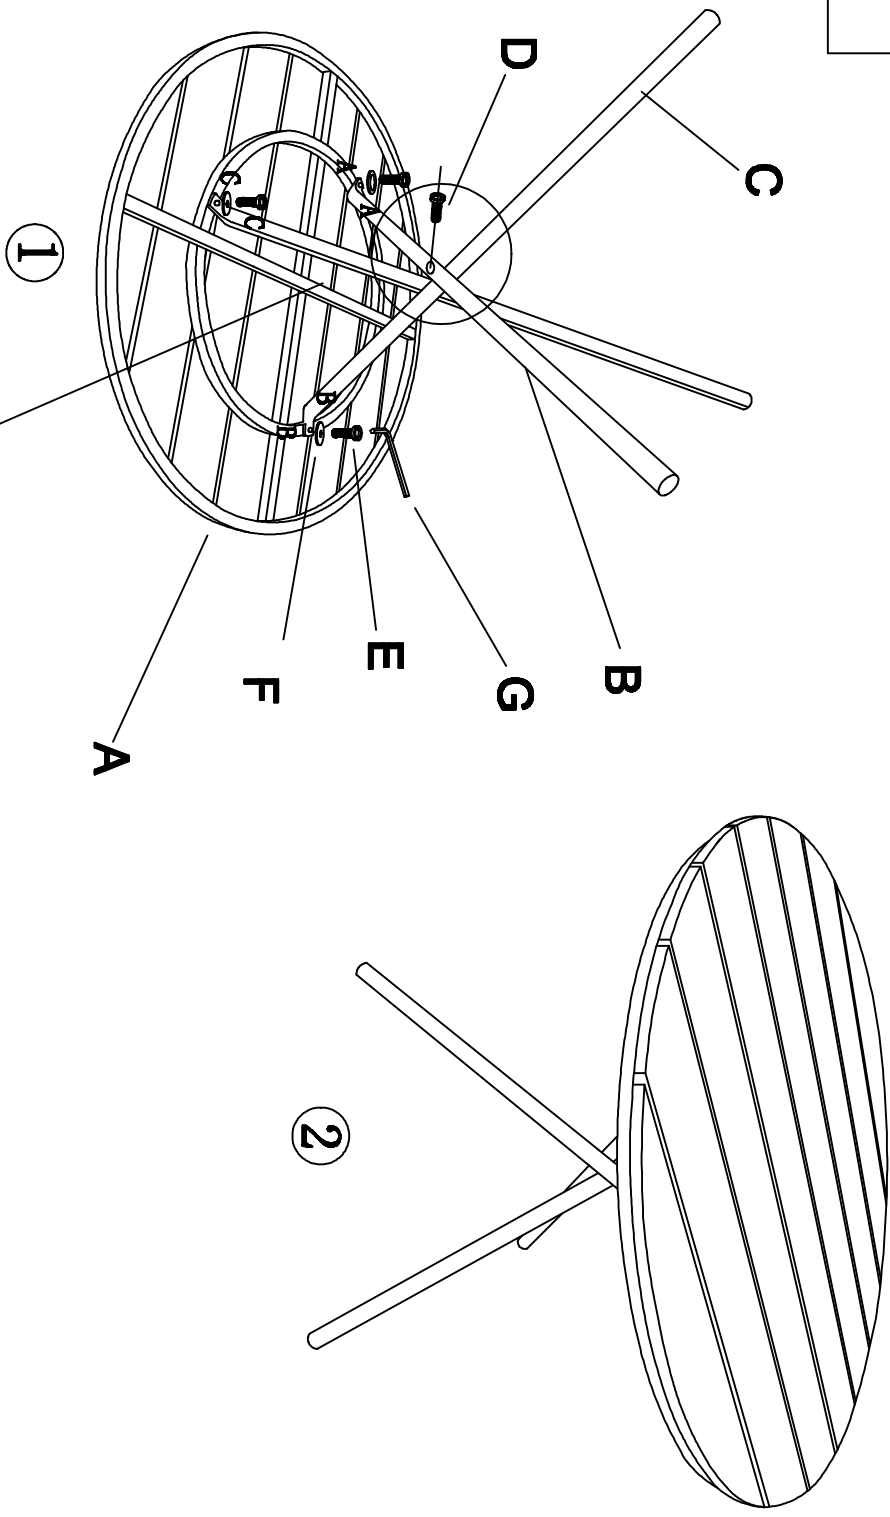


A		B		C		D		E		F	
	1 pc		1 pc		1 pc		M6*50 1pc		M6*15 3pc		M6*16*1 3pc

G	
	M4 1pc

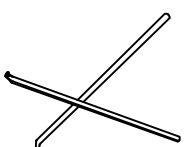

Firstly, insert the M6*50mm screw into the hole, tighten three points A, B and C, and then tighten the M6*50mm screw